

PROGRAMMING THE WIRELESS REMOTE TRANSMITTER

TO PROGRAM:

1. Locate the grey Remote Control Receiver box (6.25" long by 3.14" high) on the Hydraulic Power Unit. Take the cover off (4 screws).
2. Locate the Program Switch s1 (small red button in the upper left corner approx. 1" left of the red LED light) See Remote Circuit picture attached
3. Press the Program Switch
4. Press the **UP** Button on the Remote Transmitter for 1 second and release
5. Wait 10 seconds for the red LED light (in the grey box) to flash and then go off
6. The Remote Transmitter is now programmed
7. Repeat steps 3-5 for another Remote Transmitter

Remember to hold the * button on the remote control for 5 seconds to wake up the remote, then the UP and DOWN buttons will work.

To clear all programming press and hold the S1 button for approximately 10 seconds until the red LED light on the board goes off.